




Nokia 6310i Speaker Replacement

This guide shows how to remove the speaker.

Written By: Mustafa

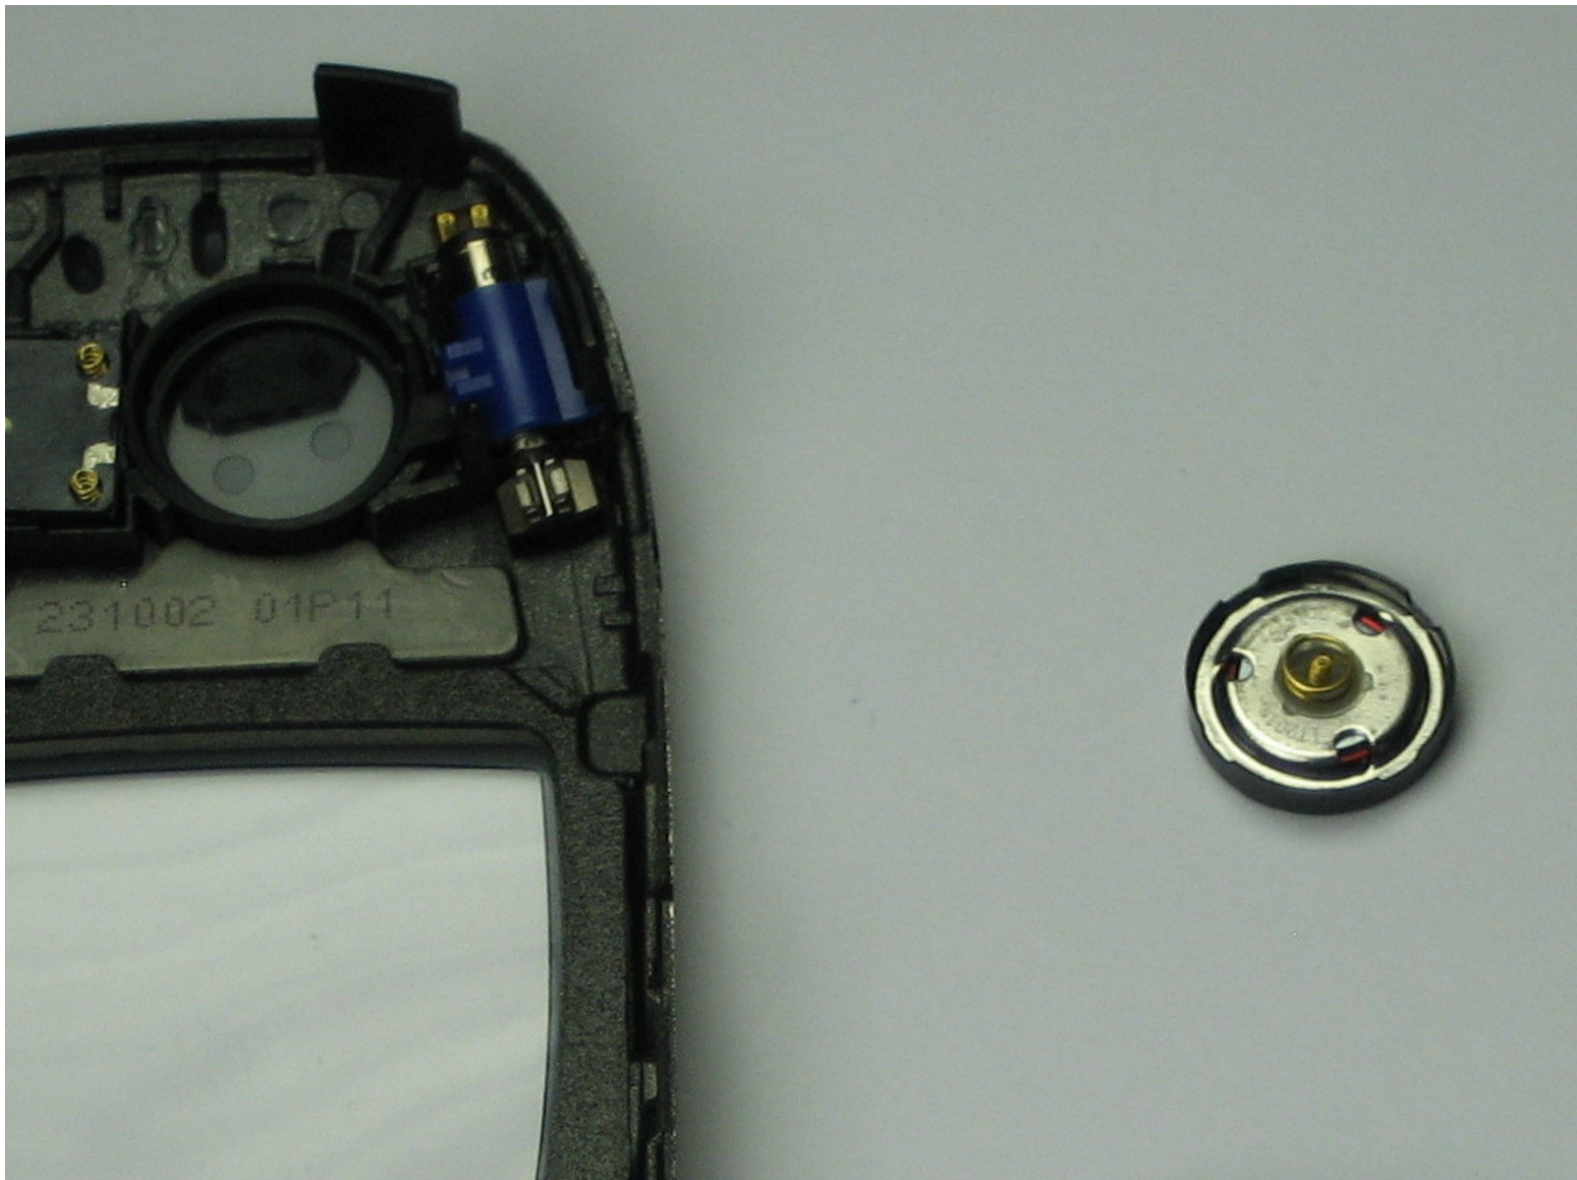



TOOLS:


- [iFixit Opening Tools](#) (1)
 - [T6 Torx Screwdriver](#) (1)
-

Step 1 — Battery



- Press and hold the battery release button and slide the battery away from the Nokia logo

Step 2 — SIM card

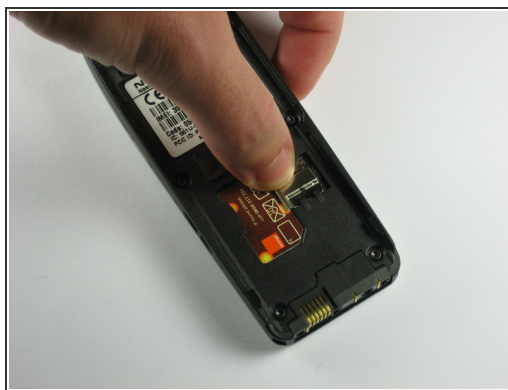

- Slide the SIM card lock away from the SIM card.


i The SIM card pops out. Remove the SIM card.

Step 3 — Back Cover



- Unscrew and remove the four T6 Torx screws.

Step 4

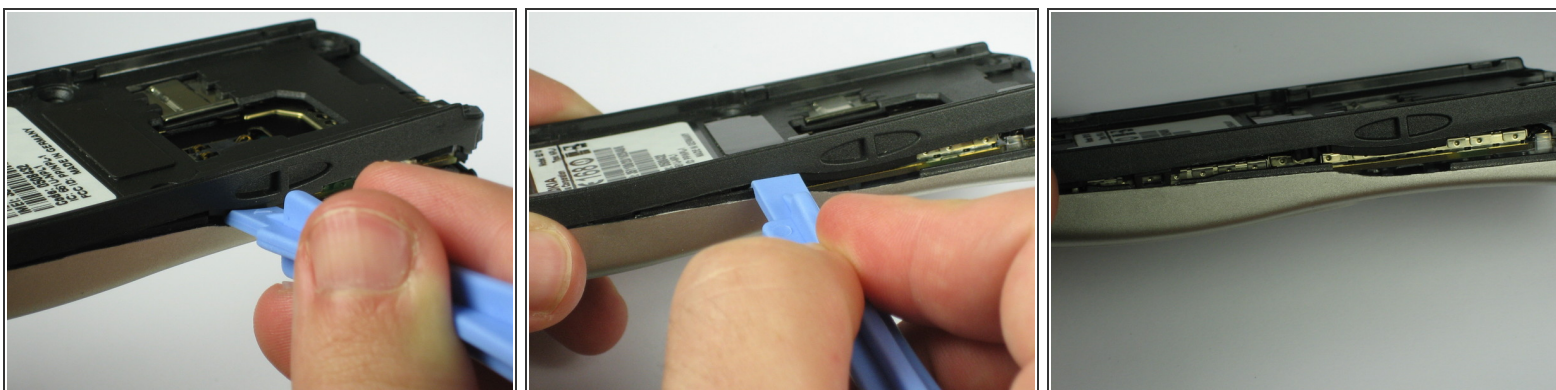

- Insert a plastic opening tool between the faceplate and the black backplate. Gently pry them apart, working from the lower end to the upper side of the phone.


Step 5



- Use the plastic opening tool to separate the top part of the backplate.


i The plastic clips at the top require slightly more force to separate.

Step 6 — Antenna

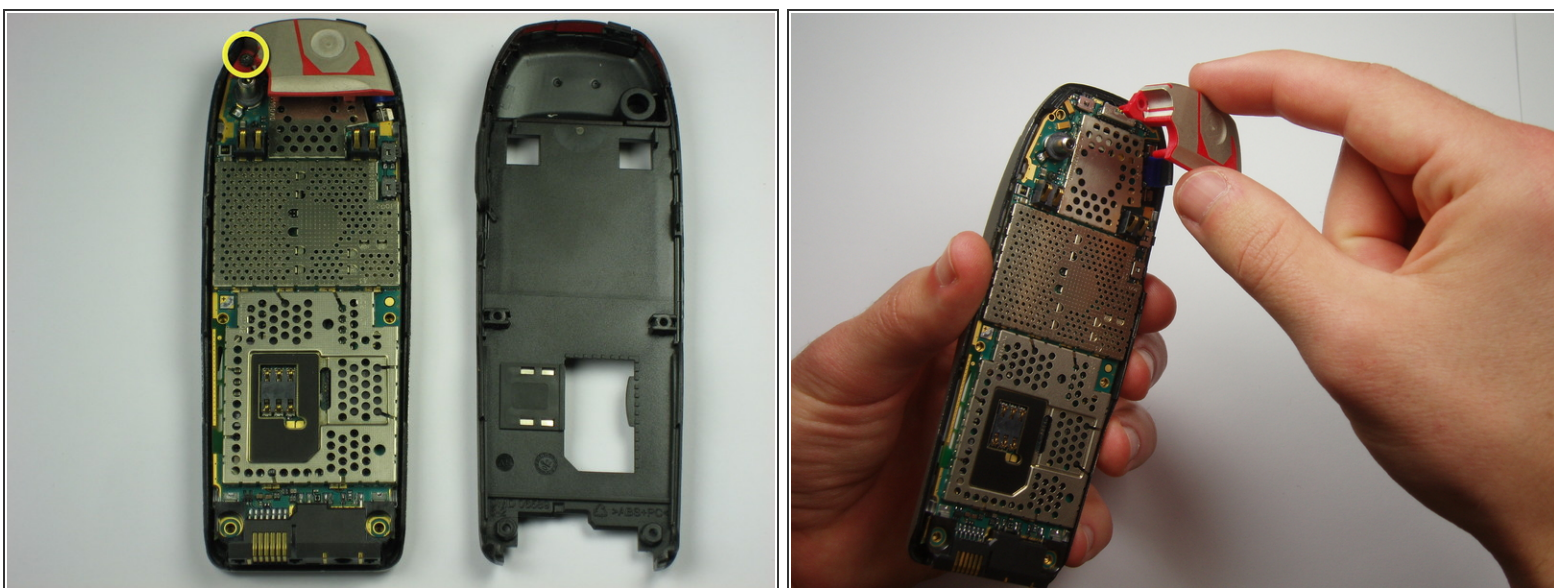


- Remove the screw holding the antenna to the circuit board.
- Carefully lift off the antenna from the circuit board.

Step 7 — Motherboard

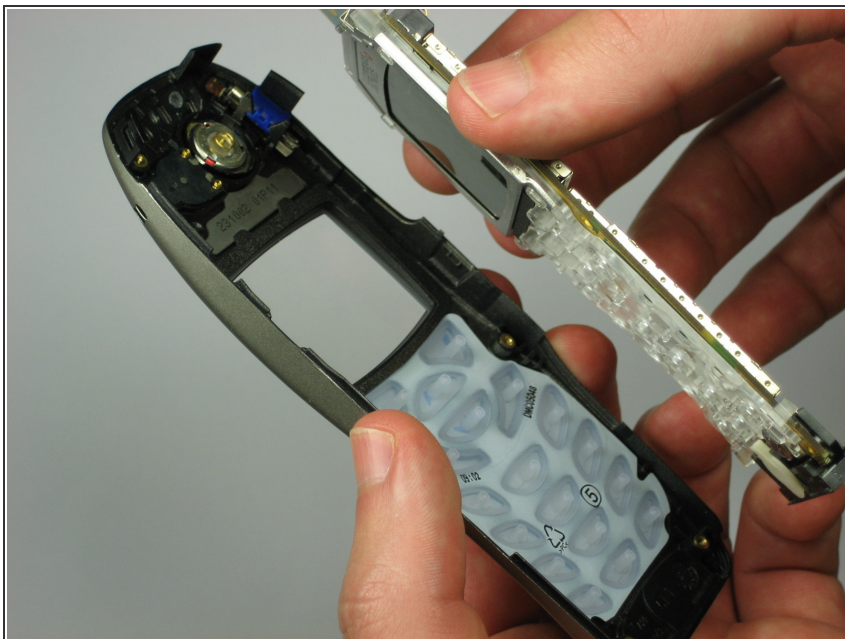

- Lift off the motherboard from the faceplate.

Step 8 — Speaker

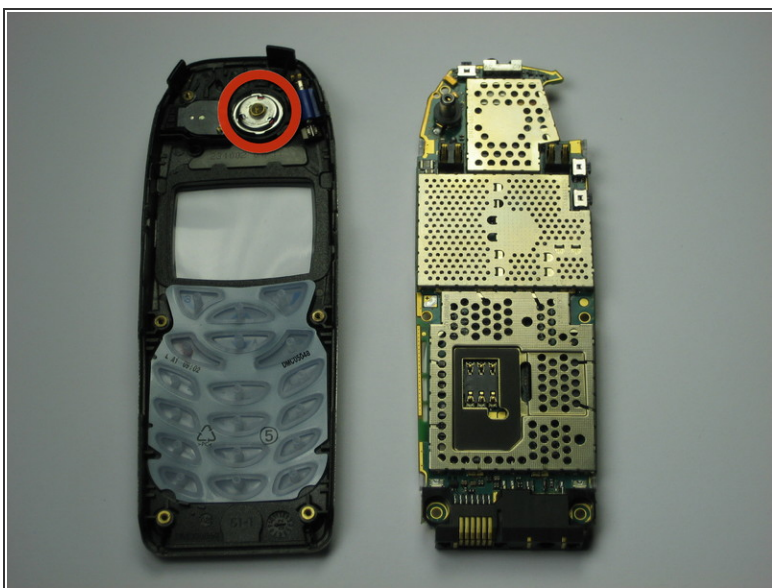

- Gently pop out the golden spring in the middle of the speaker. It should come out with little force.

To reassemble your device, follow these instructions in reverse order.

